







 

















 



 



 










 






 





 
 
 



 







 

 

 

 



 





 

 

 

 





Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute / Dimmer
	Tv/DTV		TV/Radio /		Vol-		Vol-
	Source		AV / Input / RDS		PR-		CH- / Page-
	1		1		Guide		Guide / EPG / -/--
	2		2		Menu		Menu / Home
	3		3		CH.List		Smart / List
	4		4		Tools		Setup / OPT /
	5		5		Up		Up
	6		6		Return		Shift + Back / Return
	7		7		Left		Left
	8		8		Enter		OK
	9		9		Right		Right
	-/--		Shift + Guide / EPG / -/--		Info		Info / Angle
	0		0		Down		Down
	Pre-CH		Back / Return		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Red		Red / Netflix / Search
	PR+		CH+ / Page+		Green		Green / APP / Repeat





Original	Recharge
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 TTX/MIX Text / Goto
	 P.Size Zoom / Size
	 DMA Display / Media
	 E.Mode D.Menu / Top
	 3D Shift + 3
	 SUBT. Subtitle / EQ
	 << / Tune-
	 Pause / Step / Freeze
	 >> / Tune+
	 Rec / Rec Mode
	 Play / Slow
	 Stop / Hold

Original	Recharge

