



 
 


 





	Original	Rechange	Original	Rechange
	Power			>>
	Source			<<
	Open/Close			>>
	Sleep			Stop
	1			Play
	2			Pause
	3			Vol +
	4			Vol -
	5			Mute
	6			Repeat
	7			Ch +
	8			Ch -
	9			D. Menu
	0			Menu
	Dolby PL			Title Menu
	DSP/EQ			Options
	I<<<			Info





 
 



 

 
 
 
 















 
 

 




Original		Rechange		Original		Rechange	
	Return		Back				
	Exit		Exit				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Red		Red				
	Green/Tuner		Green				
	Yellow/MO/ST		Yellow				
	Blue/CD Ripping		Blue				
	Dimmer		Subt				
	S.Vol		Format				
	P.Bass/Audio Upscale		3D				





Original	Rechange
 Power	 Power
 Function Tv	 AV
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play

Original	Rechange
 Pause	 Pause
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red





Original	Recharge	Original	Recharge
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

