



Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Red	 Red
 Recall	 Back	 Green	 Green
 Game	 Media	 Yellow	 Yellow
 Auto	 Smart	 Blue	 Blue
 Info	 Info	 Zoom	 Eject





	Original	Rechange	Original	Rechange
	Lan/Audio	DUAL		Dual
	Text	REPEAT TEXT		Text
	Tv/Radio	SEARCH TV/R		TV/R
	Subtitle	AD SUBT		Subt
	Play	PLAY MODE		Play
	Pause			Pause
	<<	<<		<<
	>>	>>		>>

