



| Original | Recharge |
|------------|------------------------|
| Standby | Power |
| USB/Card | Shift + 8 |
| Open/Close | Eject / Surround |
| Audio | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| Search | Red / Netflix / Search |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Clear | Exit / Cancel / Clear |
| 0/10 | 0 |

| Original | Recharge |
|------------|-----------------------|
| Menu | Menu / Home |
| Setup | Setup / OPT / |
| Display | Display / Media |
| Title | Sound / Title |
| Left | Left |
| Up | Up |
| Right | Right |
| Enter | OK |
| Down | Down |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Step | Pause / Step / Freeze |
| Stop | Stop / Hold |
| Play/Pause | Play / Slow |
| Vol+ | Vol+ |



