






 



 

 



 





 

 



 







 

 
 
 

 









 



 

 


 
 



 




Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	PP		Pre Ch		Up		Up
	Mute		Mute		Down		Down
	I-II		Dual		Right		Right
	P<P		Back		Left		Left
	-/--		Guide		M		Ok
	1		1		PR+		Ch +
	2		2		PR-		Ch -
	3		3		M		Menu
	4		4		Red/Sound		Red
	5		5		Green/Picture		Green
	6		6		Yellow/Feature		Yellow
	7		7		Blue/Install		Blue
	8		8		TV		TV/R
	9		9		AV		AV
	0		0		[≡]		Text
	Vol+		Vol +		[≡o]		Smart





Original		Rechange		Original		Rechange	
	[≡+]		Subt				
	[≡x]		Options				
	[.:≡]		Media				
	[≡?]		Format				
	[≡i]		List				
	[≡♦]		3D				
	[i]/Info		Info				

