


 
 








 

 



 



 











 

 


 
 





 

 








 













| Original  |                         | Rechange  |              | Original  |                  | Rechange  |       |
|---|-------------------------|---|--------------|---|------------------|---|-------|
|    | On/Standby              |    | Power        |    | Display CD/USB   |    | Info  |
|    | Open/Close              |    | Eject        |    | Stop CD          |    | Stop  |
|    | 1                       |    | 1            |    | Play/Pause CD    |    | Play  |
|    | 2                       |    | 2            |    | Equalizer        |    | Dual  |
|    | 3                       |    | 3            |    | X-Bass           |    | Subt  |
|    | 4                       |    | 4            |    | Memory           |    | Rec   |
|    | 5                       |    | 5            |    | Clear            |    | Exit  |
|    | 6                       |    | 6            |    | Clock/Timer      |    | AV    |
|    | 7                       |    | 7            |    | Sleep            |    | Sleep |
|    | 8                       |    | 8            |    | Volume+          |    | Vol + |
|   | 9                       |   | 9            |   | Volume-          |   | Vol - |
|  | 0                       |  | 0            |  | Mute             |  | Mute  |
|  | 10+                     |  | Guide        |  | Preset Up        |  | Ch +  |
|  | Play Mode               |  | Shift + Play |  | Preset Down      |  | Ch -  |
|  | Display(Tv Out)<br>iPod |  | TV/R         |  | Tuning/Folder Up |  | >>    |
|  | Menu iPod               |  | Menu         |  | Tuning/Folder    |  | <<    |
|  | Play/Pause iPod         |  | Pause        |  | Up               |  | Up    |



