





 
 

 







 



 









 






Original	Recharge
 ON/OFF	 Power
 Freeview Play	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide
 Picture	 Format
 Sound	 Dual
 Source	 AV
 Vol+	 Vol +

Original	Recharge
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 FAV	 Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 TV	 TV/R





Original	Recharge	Original	Recharge
You Tube	Media		
Netflix	Smart		
APPs	Shift + Media		
Rec/DVD Menu	Rec		
I<<	I<<		
>>I	>>I		
Stop	Stop		
Rec List/DVD	D. Menu		
<<	<<		
>>	>>		
Play	Play		
Pause	Pause		
Red/Goto	Red		
Green/A-B	Green		
Yellow/Angle	Yellow		
Blue/Repeat	Blue		

Original	Recharge

