

















 






 



 



 
 







 



 

 
 
 











Original		Rechange		Original		Rechange	
	Power		Power		OK		OK
	1		1		Exit		Exit / Cancel / Clear
	2		2		Menu		Menu / Home
	3		3		EPG		Guide / EPG / -/--
	4		4		Mute		Mute / Dimmer
	5		5		FAV		Fav / Marker / PC
	6		6		Red		Red / Netflix / Search
	7		7		Audio		Audio / Lang I/II
	8		8		Green		Green / APP / Repeat
	9		9		Yellow		Yellow / YouTube / Repeat
	0		0		Text		Text / Goto
	Tv/AV		AV / Input / RDS		Blue		Blue / Prime Video / Random
	←PR		Back / Return		Audio L/R		Setup / OPT /
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				

