



Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-
	0		0		MTS		Info / Angle
	DTV/ATV		D.Menu / Top		Rec List		Smart / List
	Recall		Back / Return		CH+		CH+ / Page+
	P.Mode		Picture / Format		CH-		CH- / Page-
	S.Mode		Sound / Title		FAV/List		Fav / Marker / PC
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode








Original	Rechange
Freeze	Pause / Step / Freeze
Guide	Guide / EPG / -/--
<<<	<<< / Tune-
>>> / Aspect	>>> / Tune+
>>> / Aspect	Shift + Picture / Format
I<<< / Cancel	I<<< / Preset-
I<<< / Cancel	Shift + Exit / Cancel / Clear
>>>I / Sub.PG	>>>I / Preset+
Stop / Index	Stop / Hold
Play/Pause / Timeshift	Play / Slow
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Eject / Surround
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto
Red	Red / Netflix / Search

Original	Rechange
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random









 

Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Rechange
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode





Original	Recharge	Original	Recharge
 Freeze	 Pause / Step / Freeze	 Green	 Green / APP / Repeat
 Guide	 Guide / EPG / -/-	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Tune-	 Cyan	 Blue / Prime Video / Random
 >> / Aspect	 >> / Tune+		
 >> / Aspect	 Shift + Picture / Format		
 I<< / Cancel	 I<< / Preset-		
 I<< / Cancel	 Shift + Exit / Cancel / Clear		
 >>I / Sub.PG	 >>I / Preset+		
 Stop / Index	 Stop / Hold		
 Play/Pause / Timeshift	 Play / Slow		
 Tv/Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Eject / Surround		
 Size	 Zoom / Size		
 Hold	 Shift + Stop /		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		

Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random		

