




 

 
 

 









 
 


 


 

 















 



 




Original	Recharge
Power	Power
I<<	I<<
←	Shift + Left
→	Shift + Right
>>I	>>I
<<	<<
Play	Play
>>	>>
Sync Menu	Smart
Pause	Pause
Stop	Stop
Theatre	TV/R
[+]	3D
Digital	Media
Analog	Shift + Media
[...]	Subt
Audio	Dual

Original	Recharge
[i]/[?]	Info
Guide	Guide
Input	AV
Up	Up
Right	Right
Down	Down
Left	Left
OK	Ok
Return	Back
Home	Shift + Smart
Options	Options
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
1	1
2	2



 
 
 



 


 



 


 




 


 




 
 

 

 




 
 





 



 





 




 
 







	Original	Rechange		Original	Rechange
	Power		Power		1
	I<<		I<<		2
	>>I		>>I		3
	<<		<<		4
	Play		Play		5
	>>		>>		6
	Pause		Pause		7
	Stop		Stop		8
	[...]		Subt		9
	AD		Shift + Subt		0
	[i+]/[?]		Info		Prog+
	Up		Up		Prog-
	Right		Right		Recall
	Down		Down		Rec
	Left		Left		Top Menu
	OK		Ok		Menu
	Return/Back		Back		



 

 


 




 



 


 

 



 
 














 


 
 


 
 
 



 

 
 



 
 
 






Original		Rechange		Original		Rechange	
	Power		Power		Return/Back		Back
	I <<		I <<		Home		Smart
	←		Ch -		Options		Options
	→		Ch +		Red		Red
	>> I		>> I		Green		Green
	<<		<<		Yellow		Yellow
	Play		Play		Blue		Blue
	>>		>>		1		1
	Pause		Pause		2		2
	Stop		Stop		3		3
	AD		Subt		4		4
	[i+]		Info		5		5
	Up		Up		6		6
	Right		Right		7		7
	Down		Down		8		8
	Left		Left		9		9
	OK		Ok		0		0





Original	Recharge	Original	Recharge
 Power	 Power	 Left	 Left
 I<<	 I<<	 OK	 Ok
 ←	 Ch -	 Return/Back	 Back
 →	 Ch +	 Home	 Smart
 >>I	 >>I	 1	 1
 <<	 <<	 2	 2
 Play	 Play	 3	 3
 >>	 >>	 4	 4
 Pause	 Pause	 5	 5
 Stop	 Stop	 6	 6
 [...] AD	 Shift + Subt	 7	 7
 [i+]/[?]	 Info	 8	 8
 Source	 AV	 9	 9
 Up	 Up	 0	 0
 Right	 Right	 [≡]/Text	 Text
 Down	 Down	 Mute	 Mute
		 Vol+	 Vol +



