

 



 












 


















Original	Rechange
 Source	 AV / Input / RDS
 Power	 Power
 Digital/Analog	 Setup / OPT /
 Tv/Radio	 TV/Radio /
 Sync Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i]/[?]	 Info / Angle
 0	 0

Original	Rechange
 [≡]/Text	 Text / Goto
 Google Play	 Display / Media
 Netflix	 Shift + Red / Netflix /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Action Menu	 D.Menu / Top
 Tv	 Shift + 1
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Shift + Menu / Home





	Original	Rechange	Original	Rechange
	Discover	Picture / Format	Stop	Stop / Hold
	Vol+	Vol+	Title List	Smart / List
	Recall	Fav / Marker / PC		
	Prog+	CH+ / Page+		
	Vol-	Vol-		
	Mute	Mute / Dimmer		
	Prog-	CH- / Page-		
	Audio	Audio / Lang I/II		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	[...]	Subtitle / EQ		
	I<<	I<< / Preset-		
	Pause	Pause / Step / Freeze		
	>>I	>>I / Preset+		
	Help	Sleep / Timer		
	Rec	Rec / Rec Mode		

