




Original	Rechange	Original	Rechange
	Standby		Power
	Pic Muting		Mute / Dimmer
	Freeze		Pause / Step / Freeze
	Input		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Reset		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Keystone		Smart / List
	D-Zoom+		CH+ / Page+
	Vol-		Vol-
	APA		Display / Media
	D-Zoom-		CH- / Page-

