



 







 

 

 







Original		Recharge		Original		Recharge	
	Sleep		Sleep / Timer		5		5
	Power		Power		Enter 2		Shift + OK
	VIDEO 1		Shift + 4		6		6
	DVD/LD		Shift + 2		7		7
	VIDEO 2		Shift + 9		8		8
	TV / SAT		Shift + 1		9		9
	VIDEO 3		Shift + Guide / EPG / -/-		>10		Guide / EPG / -/-
	TV / SAT		Shift + 0		0		0
	AUX		Shift + 7		Enter		OK
	PHONO		Shift + 8		D.Tuning		Smart / List
	CD/SACD		Shift + 3		D.Skip/CH/Preset		CH+ / Page+
	MD/TAPE		Shift + 5		D.Skip/CH/Preset -		CH- / Page-
	TUNER		Shift + 6		Display		Display / Media
	1		1		A.F.D.		Red / Netflix / Search
	2		2		2CH / Off		Green / APP / Repeat
	3		3		MULTI CH / 2CH DIRECT		Info / Angle
	4		4		Mode-		<< / Tune-





Original	Recharge	Original	Recharge
 Mode+	 >> / Tune+		
 Muting	 Mute / Dimmer		
 Test Tone	 Text / Goto		
 Main Menu	 Menu / Home		
 Master Vol+	 Vol+		
 Menu Left	 Left		
 Menu Right	 Right		
 +	 Blue / Prime Video / Random		
 Master Vol-	 Vol-		
 -	 Yellow / YouTube / Repeat		

