

 


 

 

 

 



 

 
 
















 

 
 

 
 

 


 

 


 
 
 



 




 
 



 
 



| Original | Rechange |
|--|--|
|  Power |  Power |
|  Menu |  Menu |
|  Top Menu |  D. Menu |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Clear |  Exit |
|  Enter |  Pre Ch |
|  F1 |  Smart |
|  F2 |  Media |

| Original | Rechange |
|---|---|
|  [::=] |  Guide |
|  Display |  Info |
|  Tools/Options |  Options |
|  Return/Exit |  Back |
|  Menu/Home |  TV/R |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  Ok |
|  Mute |  Mute |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  I<< |  I<< |
|  >>I |  >>I |
|  Play |  Play |
|  Pause |  Pause |

 






| Original | Rechange | Original | Rechange |
|---|---------------|---|----------|
|  | Power |  | Power |
|  | Menu |  | Menu |
|  | Top Menu |  | D. Menu |
|  | F1 |  | Smart |
|  | F2 |  | Media |
|  | [:=] |  | Guide |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Enter |  | Pre Ch |
|  | Clear |  | Exit |
|  | Display |  | Info |
|  | Tools/Options |  | Options |
|  | Mute |  | Mute |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Return/Exit |  | Back |
|  | Menu/Home |  | TV/R |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | >> |  | >> |





| Original | Rechange |
|---|--|
|  Power |  Power |
|  Source |  AV |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Clear |  Exit |
|  Enter |  Pre Ch |
|  Theatre |  Smart |
|  Sound Field |  Dual |
|  AMP Menu |  Menu |

| Original | Rechange |
|---|---|
|  Display |  Info |
|  Mute |  Mute |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Menu/Home |  Media |
|  Return/Exit |  Back |
|  Up |  Up |
|  OK |  Ok |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Play |  Play |
|  Stop |  Stop |
|  Pause |  Pause |
|  >>/Tuning+ |  >> |
|  <</Tuning- |  << |
|  >>I/Preset+ |  >>I |



