







 









 

















 



 







 



 



 



 



 











 



 











Original	Rechange
 Power	 Power
 Wide	 Picture / Format
 Choix Son	 Audio / Lang I/II
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Tv/Magn	 TV/Radio /
 Affich	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Rechange
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 [=]	 Text / Goto
 []	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Chaine+	 CH+ / Page+
 Chaine-	 CH- / Page-
 Menu	 Menu / Home





Original		Rechange		Original		Rechange	
	Power		Power		Chaine+		CH+ / Page+
	Eject		Eject / Surround		Chaine-		CH- / Page-
	Annul Program		Back / Return		1		1
	Remise a Zero		Smart / List		2		2
	X2		Picture / Format		3		3
	Choix Son		Audio / Lang I/II		4		4
	Wide		Zoom / Size		5		5
	Tv/Magn		TV/Radio /		6		6
	Showview		Display / Media		7		7
	Affich		Info / Angle		8		8
	Prog Rapide		Setup / OPT /		9		9
	Choix Entree		AV / Input / RDS		0		0
	Vitesse Bande		Text / Goto		-/--		Guide / EPG / -/--
	ENR		Rec / Rec Mode		Envoi		Exit / Cancel / Clear
	Ralenti		Blue / Prime Video / Random		Menu		Menu / Home
	Recher Index >>I		>>I / Pre-Set+		Relect		Subtitle / EQ
	I<< Recher Index		I<< / Pre-Set-		Up		Up



