

 









 







 















 







 











 















Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		↔		Smart / List
	Power		Power		-/--		Guide / EPG / -/--
	[]/[+]		TV/Radio /		0		0
	Input		AV / Input / RDS		C		Fav / Marker / PC
	[=]		Text / Goto		[II]/[=I]		Display / Media
	[X]/[o]		Zoom / Size		Red		Red / Netflix / Search
	1		1		Green		Green / APP / Repeat
	2		2		Yellow		Yellow / YouTube / Repeat
	3		3		Blue		Blue / Prime Video / Random
	[♦]		Picture / Format		Menu		Menu / Home
	4		4		+		Up
	5		5		Vol+		Vol+
	6		6		Progr+		CH+ / Page+
	[?]/[i+]		Subtitle / EQ		→←		OK
	7		7		-		Down
	8		8		Vol-		Vol-
	9		9		Progr-		CH- / Page-

















 





	Original	Recharge	Original	Recharge
	[+]	 OPT-TOOLS Setup / OPT /		
	<< VTR1	 TUNE- << / Tune-		
	Play VTR1	 SLOW Play / Slow		
	>> VTR1	 TUNE+ >> / Tune+		
	Power VTR1	 SHIFT +  Shift + Power		
	Stop VTR1	 HOLD Stop / Hold		
	Pause VTR1	 STEP-FREEZE Pause / Step / Freeze		
	Progr+ VTR1	 SHIFT +  Shift + CH+ /		
	Rec VTR1	 REC MODE Rec / Rec Mode		
	Progr- VTR1	 SHIFT +  Shift + CH- /		






Original	Recharge	Original	Recharge
 Power VTR2	 Power		
 Progr+ VTR2	 CH+ / Page+		
 Progr- VTR2	 CH- / Page-		
 Play VTR2	 Play / Slow		
 >> VTR2	 >> / Tune+		
 << VTR2	 << / Tune-		
 Stop VTR2	 Stop / Hold		
 Pause VTR2	 Pause / Step / Freeze		
 Rec VTR2	 Rec / Rec Mode		









Original	Rechange	Original	Rechange
 Power VTR3	 Power		
 Play VTR3	 Play / Slow		
 >> VTR3	 >> / Tune+		
 << VTR3	 << / Tune-		
 Stop VTR3	 Stop / Hold		
 Pause VTR3	 Pause / Step / Freeze		
 Prog+ VTR3	 CH+ / Page+		
 Progr- VTR3	 CH- / Page-		
 Rec VTR3	 Rec / Rec Mode		





Original		Rechange		Original	Rechange
	<< MDP		<< / Tune-		
	Play MDP		Play / Slow		
	>> MDP		>> / Tune+		
	Power MDP		Power		
	Stop MDP		Stop / Hold		
	Pause MDP		Pause / Step / Freeze		
	Progr+ MDP		CH+ / Page+		
	Progr- MDP		CH- / Page-		

