



Original	Rechange
Off	Power
ATT	Back / Return
Play/Pause DVD	Play / Slow
SRC	AV / Input / RDS
Mode	Picture / Format
I<<	I<< / Preset-
>>I	>>I / Preset+
Sound	Sound / Title
Up/+	Up
Left	Left
Enter	OK
Right	Right
System Menu	Menu / Home
List	Smart / List
Down/-	Down
DSO	TV/Radio /
EQ7	Zoom / Size

Original	Rechange
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
Vol+	Vol+
7	7
8	8
9	9
Vol-	Vol-
Clear	Exit / Cancel / Clear
0	0
DSPL/PTY	Display / Media

