 



 



 

 

 

 





































 

 



 






















Original	Rechange	Original	Rechange
 Standby	 Power	 10+	 Guide / EPG / -/--
 Open / Close	 Eject / Surround	 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Display	 Display / Media
 1	 1	 Search	 Red / Netflix / Search
 2	 2	 Setup	 Setup / OPT /
 3	 3	 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 Angle	 Info / Angle	 Down	 Down
 7	 7	 Title	 Sound / Title
 8	 8	 Menu	 Menu / Home
 9	 9	 Video Out	 AV / Input / RDS
 Program	 TV/Radio /	 HD / Res	 D.Menu / Top
 Aspect	 Picture / Format	 USB	 Shift + 8
 10/0	 0	 <<	 << / Tune-





Original	Rechange
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Repeat	 Green / APP / Repeat
 Slow	 Shift + Play /
 Ripping	 Smart / List
 Vol+	 Vol+
 Step	 Shift + Pause / Step /
 Shuffle	 Blue / Prime Video / Random
 Clear	 Exit / Cancel / Clear
 Vol-	 Vol-

Original	Rechange

