


 
 


 


 


 



 


 



 


 
 

 


 
 
 

 

 
 
 
 
 
 
 
 
 
 
 

 

 

 



 
 
 










Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		P+		Ch +
	7		7		P-		Ch -
	8		8		Mute		Mute
	9		9		i		Info
	0		0		Exit		Exit
	↔		Pre Ch		Source		AV
	Back		Back		Q.Menu		D. Menu
	Menu		Menu		EPG		Guide
	Netflix		Media		TXT		Text
	Internet		Smart		*		Format
	Ok		Ok		*/Q		3D





Original	Recharge	Original	Recharge
 [>]	 Options		
 Lang	 Dual		
 Subt.	 Subt		
 Shift + Format	 Shift + Format		
 TV	 TV/R		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		

