































































 







Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	Mute		Mute / Dimmer		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		Down		Down
	3		3		Right		Right
	4		4		Vol+		Vol+
	5		5		Left		Left
	6		6		Vol-		Vol-
	7		7		TV/TX		Text / Goto
	8		8		PP		Fav / Marker / PC
	9		9		16:9		Setup / OPT /
	0		0		Red		Red / Netflix / Search
	-/--		Guide / EPG / -/--		Green		Green / APP / Repeat
	AV		AV / Input / RDS		Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home		Blue		Blue / Prime Video / Random
	Swap		Back / Return		Violet		Display / Media
	OK		OK		[] Smart Controls		Picture / Format





Original	Rechange
Smart Controls	Sound / Title
MIX/))>((Audio / Lang I/II
P100/PAT	Sleep / Timer
SUB	Subtitle / EQ
Update	Zoom / Size
Hold	Stop / Hold
Doub/Freeze	Eject / Surround
REV/Scan	TV/Radio /

Original	Rechange

