



 



 



 









 









 





 
 





 

 




 

 

 

 

 


 








Original	Recharge
PP	PP
	 Back / Return
 Power	 Power
1	1
	 1
2	2
	 2
3	3
	 3
4	4
	 4
5	5
	 5
6	6
	 6
7	7
	 7
8	8
	 8
9	9
	 9
P<P	P<P
	 Fav / Marker / PC
0	0
	 0
--	--
	 Guide / EPG / -/--
 Menu [M]	 Menu / Home
 Info [i]	 Info / Angle
 I-II	 Audio / Lang I/II

Original	Recharge
 Mute	 Mute / Dimmer
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 V -	 Vol-
 V +	 Vol+
 P -	 CH- / Page-
 P +	 CH+ / Page+
 Red / Sound	 Red / Netflix / Search
 Red / Sound	 Sound / Title
 Green / Picture	 Green / APP / Repeat
 Green / Picture	 Picture / Format
 Yellow / Feature	 Yellow / YouTube / Repeat
 Blue / Install	 Blue / Prime Video / Random
 Text	 Text / Goto





Original	Recharge	Original	Recharge
 [≡o]	 Sleep / Timer		
 Hold	 Stop / Hold		
 [≡X]	 Exit / Cancel / Clear		
 Mix / PIP Swap	 Smart / List		
 PIP / Size	 Zoom / Size		
 PIP Down / [≡?]	 I<< / Preset-		
 PIP Up / Index	 >>I / Preset+		
 [TV]	 TV/Radio /		
 [AV]	 AV / Input / RDS		

