 




	Original	Rechange		Original	Rechange
	Power		Power		P+
	Tv/R		TV/R		P-
	Input		AV		Vol+
	Mute		Mute		Vol-
	1		1		Up
	2		2		Down
	3		3		Right
	4		4		Left
	5		5		Ok
	6		6		i
	7		7		Audio
	8		8		Sub
	9		9		Guide
	0		0		TXT
	-/--		Shift + Guide		Back
	Exit		Exit		Pause
	Menu		Menu		F1
					List





Original	Recharge
 F2	 Sleep
 F3	 D. Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Recharge





Original	Recharge	Original	Recharge
	Power		Power
	TV/R		TV/R
	Source		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Menu		Menu
	Exit		Exit
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Audio		Dual
	Sub		Subt
	Guide		Guide
	TXT		Text
	↔		Back
	Pause		Pause
	F1		Options





Original	Recharge
F2	Format
F3	3D
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Original	Recharge

