


 



 

 



 
 








 


 

 


 

 

 


 

























Original	Rechange	Original	Rechange
 Power	 Power	 TV / AV	 AV
 Mute	 Mute	 Red / Audio	 Red
 1	 1	 Red / Audio	 Dual
 2	 2	 Green / Text	 Green
 3	 3	 Green / Text	 Text
 4	 4	 Yellow / [ _ ]	 Yellow
 5	 5	 Yellow / [ _ ]	 Subt
 6	 6	 Blue / Timer	 Blue
 7	 7	 Blue / Timer	 Shift + AV
 8	 8	 EPG	 Guide
 9	 9	 Menu	 Menu
 0	 0	 Info	 Info
 TV / Radio	 TV/R	 Exit	 Exit
 ←PR	 Back	 Up / PR+	 Up
 ↑	 >>I	 Up / PR+	 Ch +
 ↓	 I<<	 Down / PR-	 Down
 Pause	 Pause	 Down / PR-	 Ch -





Original	Rechange	Original	Rechange
 Right / Vol+	 Right		
 Right / Vol+	 Vol +		
 Left / Vol-	 Left		
 Left / Vol-	 Vol -		
 OK / List	 Ok		
 OK / List	 List		
 FAV	 Pre Ch		
 Sleep	 Sleep		
 Smart	 Smart		
 PAL / NTSC	 Format		

