
 



 



 






 




 






Original		Rechange		Original		Rechange	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[*]/Display		Info		Enter		Ok
	Recall		Back		TXT		Text
	Freeze		Options		Play		Play
	P.Mode		Format		Pause/Time Shift		Pause
	S.Mode		Dual		Stop/EPG		Stop





	Original	Rechange	Original	Rechange
	Record	 Rec		
	<</Index	 <<		
	>>/Hold	 >>		
	I<</Reveal	 I<<		
	>>I/Subpage	 >>I		
	Mix/Fav List	 Pre Ch		
	Size/Subtitle	 Subt		
	Cancel/Audio	 3D		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

