



Original		Rechange		Original		Rechange	
	Power		Power		-/--	+	Shift + Guide / EPG / -/--
	Mute		Mute / Dimmer		Jump		Smart / List
	Source		AV / Input / RDS		Menu		Menu / Home
	P.Mode		Picture / Format		Info		Info / Angle
	S.Mode		Sound / Title		Sleep		Sleep / Timer
	I/II/Audio		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	P.Size		Zoom / Size		Up		Up
	1		1		Left		Left
	2		2		Enter		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		P-		CH- / Page-
	8		8		P+		CH+ / Page+
	9		9		Red/D.Setup		Red / Netflix / Search
	0		0		Red/D.Setup		Setup / OPT /





Original	Rechange
REPEAT Green/Repeat	Green / APP / Repeat
ZOOM Yellow/Zoom	Yellow / YouTube / Repeat
ZOOM Yellow/Zoom	Shift + Zoom /
GOTO Blue/Goto	Blue / Prime Video / Random
GOTO Blue/Goto	Shift + Text /
[≡i]/FAV.CH	Fav / Marker / PC
[≡?]/Freeze	Shift + Pause / Step /
[≡♦]/USB/SD	Shift + 8
[≡+]/Tv/Radio	TV/Radio /
Rec	Rec / Rec Mode
Stop	Stop / Hold
Open/Close	Eject / Surround
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-

Original	Rechange
>>I	>>I / Preset+
DVD Menu	D.Menu / Top
Text	Text / Goto
Subtitle	Subtitle / EQ
Guide	Guide / EPG / -/-

