






 

 

 

 

 





 
 



Original	Recharge
 Power	 Power
 TV / AV	 AV / Input / RDS
 TV / TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Display / Media
 DTV	 Setup / OPT /
 Hold	 Stop / Hold
 Size	 Zoom / Size
 Subpage	 Eject / Surround
 Index	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH +	 CH+ / Page+
 Menu	 Menu / Home
 Vol +	 Vol+

Original	Recharge
 CH -	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Vol -	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Recharge
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 Picture	 Picture / Format
 Sound	 Sound / Title
 Nicam / A2	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Channel List	 Smart / List
 EPG	 Guide / EPG / -/--
 TV / Radio	 TV/Radio /

Original	Recharge

