



























 









Original	Recharge
 Power	 Power
 Top Menu	 Shift + D.Menu / Top Menu
 DVD Menu	 D.Menu / Top
 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround
 [▼]	 Shift + Down
 O)I/II	 Display / Media
 Subtitle	 Subtitle / EQ
 Text/Angle	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 AD	 Audio / Lang I/II
 0	 0
 ATV/DTV	 Shift + AV / Input / RDS
 Guide	 Guide / EPG / -/-
 Input	 AV / Input / RDS
 Menu	 Menu / Home
 Quick	 Shift + Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Jump	 Smart / List
 Return	 Back / Return
 Setup	 Setup / OPT /





Original		Recharge		Original	Recharge
	P+		CH+ / Page+		
	[≡i]/[≡+]		Info / Angle		
	Vol+		Vol+		
	P-		CH- / Page-		
	Mute		Mute / Dimmer		
	Vol-		Vol-		
	Pause		Pause / Step / Freeze		
	<</[≡?]		<< / Preset-		
	>> /[O]/[≡x]		>> / Preset+		
	<</[≡+]		<< / Tune-		
	Play		Play / Slow		
	Stop		Stop / Hold		
	>>/[≡◇]		>> / Tune+		
	Red/Zoom		Red / Netflix / Search		
	Green/Repeat		Green / APP / Repeat		
	Yellow/Root		Yellow / YouTube / Repeat		
	Blue/Title		Blue / Prime Video / Random		

