 



 

 
 

 
 
 
 

 
 
 


 



 












 



 

 



 



 



 











 




Original		Rechange		Original		Rechange	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Display		Info
	1		1		Menu		Menu
	2		2		Exit		Exit
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Mute		Mute
	FAV		Pre Ch		PC		Guide
	Recall		Back		DTV		D. Menu
	P.Mode		Format		CH+		Ch +
	S.Mode		Shift + Dual		CH-		Ch -
	Sleep		Sleep		Media		Media





Original	Rechange	Original	Rechange
 Repeat	 Shift + Text	 Green	 Green
 I/II/Audio	 Dual	 Yellow	 Yellow
 Size/Aspect	 3D	 Blue	 Blue
 Text	 Text		
 Reveal	 Options		
 Hold	 Smart		
 Play	 Play		
 Subpage	 Eject		
 Pause	 Pause		
 Stop	 Stop		
 Subtitle	 Subt		
 Index	 List		
 <<	 <<		
 >>	 >>		
 <<	 <<		
 >> /Mix	 >>		
 Red	 Red		

