







 

 

 





 

 

 

 











 

 





 



 

 

 











 







Original	Rechange	Original	Rechange
 Power	 Power	 +/-	 Shift + Guide / EPG / +/-
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 Aspect	 Shift + Picture / Format	 Red	 Red / Netflix / Search
 P.Mode	 Picture / Format	 Green	 Green / APP / Repeat
 S.Mode	 Sound / Title	 Yellow	 Yellow / YouTube / Repeat
 Audio / Nicam	 Audio / Lang I/II	 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Menu	 Menu / Home
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Vol +	 Vol+
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 CH +	 CH+ / Page+
 0	 0	 Vol -	 Vol-





Original	Recharge
Display	Display / Media
CH -	CH- / Page-
TXT	Text / Goto
Index	Setup / OPT /
Hold	Shift + Stop /
Mix	Shift + Text /
Subpage	Eject / Surround
Reveal / Subtitle	Subtitle / EQ
Size	Zoom / Size
Rec / Goto /	Rec / Rec Mode
EPG	Guide / EPG / -/--
List	Smart / List
TV / Radio	TV/Radio /
FAV	Fav / Marker / PC
Play / Pause	Play / Slow
Play / Pause	Shift + Play /
Stop	Stop / Hold

Original	Recharge
PVR Menu	D.Menu / Top
Media	Shift + Display / Media
L<<	L<< / Preset-
>>	>>  / Preset+
<<	<< / Tune-
>>	>> / Tune+

