





 


 
 

 
 
 


 











Original		Rechange		Original		Rechange	
	Power		Power		Fav		Shift + Pre Ch
	Mute		Mute		Size		Eject
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		CH+ / Page+		Ch +
	4		4		CH- / Page-		Ch -
	5		5		QV Top		Smart
	6		6		Source		AV
	7		7		Menu		Menu
	8		8		Q.Menu		D. Menu
	9		9		Display		Info
	0		0		Up		Up
	Audio Lang. I/II		Dual		Left		Left
	Subtl		Subt		OK		Ok
	EPG		Guide		Right		Right
	-> P <-		Format		Down		Down
	-> S <-		Shift + Dual		Exit		Exit





Original		Rechange		Original		Rechange	
	Red		Red		CEC / F.Fwd		Media
	FAV CH		Pre Ch				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text / Play/Pause		Text				
	Text / Play/Pause		Play				
	Text / Play/Pause		Pause				
	Index / Repeat		Shift + Text				
	Index / Repeat		Shift + Info				
	Cancel / Time		Back				
	Cancel / Time		Shift + AV				
	Hold / Stop		Stop				
	Mix / Prev		I<<				
	Subpg / Next		>>I				
	Reveal / F.Rev		<<				
	CEC / F.Fwd		>>				

