






 


 
 




 



 
 
 

 
 
 

 



 
 
 

 

 
 
 

 

 

 

 

 
 


 



 
 


 



 





Original		Recharge		Original		Recharge	
	Power		Power		Info		Info
	Mute		Mute		Up		Up
	PP		Pre Ch		Down		Down
	I-II		Dual		Right		Right
	1		1		Left		Left
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		Red/Sound		Red
	7		7		Green/Picture		Green
	8		8		Yellow/Feature		Yellow
	9		9		Blue/Install		Blue
	0		0		TV		TV/R
	--		Guide		AV		AV
	P<P		Back		[≡]		Text
	Menu		Menu		[ /≡]		Media





Original		Rechange		Original		Rechange	
	[≡o]	 AD SUBT	Subt				
	[≡+]	 PICTURE FORMAT	Format				
	[≡x]	 SETTINGS OPT	Options				
	[≡♦]	 ECO 3D	3D				
	[≡?]	 HOME SMART	Smart				
	[≡i]	 CLEAR EXIT	Exit				

