






| Original  |         | Rechange  |                  | Original  |          | Rechange  |                       |
|---|---------|---|------------------|---|----------|---|-----------------------|
|    | Power   |    | Power            |    | Menu     |    | Menu / Home           |
|    | Mute    |    | Mute / Dimmer    |    | Source   |    | AV / Input / RDS      |
|    | 1       |    | 1                |    | Up       |    | Up                    |
|    | 2       |    | 2                |    | Left     |    | Left                  |
|    | 3       |    | 3                |    | Enter    |    | OK                    |
|    | 4       |    | 4                |    | Right    |    | Right                 |
|    | 5       |    | 5                |    | Down     |    | Down                  |
|    | 6       |    | 6                |    | Exit     |    | Exit / Cancel / Clear |
|    | 7       |    | 7                |    | Display  |    | Display / Media       |
|   | 8       |   | 8                |   | Vol+     |   | Vol+                  |
|  | 9       |  | 9                |  | Vol-     |  | Vol-                  |
|  | 0       |  | 0                |  | MTS      |  | Info / Angle          |
|  | DTV/ATV |  | D.Menu / Top     |  | Rec List |  | Smart / List          |
|  | Recall  |  | Back / Return    |  | CH+      |  | CH+ / Page+           |
|  | P.Mode  |  | Picture / Format |  | CH-      |  | CH- / Page-           |
|  | S.Mode  |  | Sound / Title    |  | FAV/List |  | Fav / Marker / PC     |
|  | Sleep   |  | Sleep / Timer    |  | Rec      |  | Rec / Rec Mode        |







| Original  | Rechange   |
|---|--|
|  Power     |  Power              |
|  Mute      |  Mute / Dimmer      |
|  1         |  1                  |
|  2         |  2                  |
|  3         |  3                  |
|  4         |  4                  |
|  5         |  5                  |
|  6         |  6                  |
|  7         |  7                  |
|  8         |  8                  |
|  9       |  9                |
|  0       |  0                |
|  DTV/ATV |  D.Menu / Top     |
|  Recall  |  Back / Return    |
|  P.Mode  |  Picture / Format |
|  S.Mode  |  Sound / Title    |
|  Sleep   |  Sleep / Timer    |

| Original   | Rechange  |
|--|---|
|  Menu       |  Menu / Home           |
|  Source     |  AV / Input / RDS      |
|  Up         |  Up                    |
|  Left       |  Left                  |
|  Enter      |  OK                    |
|  Right      |  Right                 |
|  Down       |  Down                  |
|  Exit       |  Exit / Cancel / Clear |
|  Display    |  Display / Media       |
|  Vol+       |  Vol+                  |
|  Vol-     |  Vol-                |
|  MTS      |  Info / Angle        |
|  Rec List |  Smart / List        |
|  CH+      |  CH+ / Page+         |
|  CH-      |  CH- / Page-         |
|  FAV/List |  Fav / Marker / PC   |
|  Rec      |  Rec / Rec Mode      |



