







 
 



 
 
 
 

 

 



 

 



Originale	Sostituto
Power	Power
Source	SRC
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	TEXT
PRE-CH	P/C / FAV
Vol+	VOL +
Vol-	VOL -
Mute	MUTE

Originale	Sostituto
P+	CH +
P-	CH -
CH List	TV/R
Content	Shift + VOD
Menu	MENU
Guide	-/-- / EPG
Tools	OPT+
Info	INFO
Return	BACK
Exit	EXIT
Up	UP
Down	DOWN
Right	RIGHT
Left	LEFT
Enter	OK
Red	Red (A)
Green	Green (B)





Originale		Sostituto		Originale	Sostituto
	Yellow		Yellow (C)		
	Blue		Blue (D)		
	Media. P		MEDIA		
	Internet/@TV		VOD		
	Dual I-II		Audio		
	AD		WIDE		
	P.Size		V-FOR		
	Subt.		Subt.		
	<<		Rewind		
	Pause		Pause		
	>>		Fast Forward		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

