









 

 

 

 

 

 

 

 

 













 
 
 

 

 



 


 
















Originale	Sostituto	Originale	Sostituto
	Power		Power
			Picture / Format
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	IPTV		Display / Media
	Eco / Search		Fav / Marker / PC
	Guide-Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle





Originale	Sostituto	Originale	Sostituto
1	TV 1		
2 ARC	DVD 2		
3 DEF	CD - STB 3		
4 CH	VIDEO 4		
5 INL	TAPE 5		
6 HND	TUNER 6		
7 PGRS	AUX - HDD 7		
8 TUV	USB 8		
9 NXYZ	BLUETOOTH 9		
DISC MENU	TOP MENU D.MENU		
0	HDMI - BAT 0		
TEXT MEDIA CENTER	GOTO TEXT		
SOUND	TITLE SOUND		
Repeat	SIZE ZOOM		
	SHIFT + APP REPEAT		

Originale	Sostituto	Originale	Sostituto







 





 

 





 

 

 








Originale	Sostituto	Originale	Sostituto
	Power		Vol-
	(•J)		Vol+
	Back		CH- / Page-
	Menu		Red / Netflix / Search
	Up		Green / APP / Repeat
	Left		Yellow / YouTube / Repeat
	Ok		Blue/00/Lang.
	Right		Mute / Dimmer
	Down		Rec / Rec Mode
	Exit		Source
	Stop		Option
	Smart Tv		Subt.
	Skip Prev.		Iptv
	Play		Eco/Search
	Pause		Guide/ Popup
	Skip Next		Ch.List
	Ch+		Info
			Mute / Dimmer
			Rec / Rec Mode
			AV / Input / RDS
			Setup / OPT /
			Subtitle / EQ
			Display / Media
			Fav / Marker / PC
			Guide / EPG / -/-
			Shift + Smart / List
			Info / Angle





Originale		Sostituto	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc Menu		D.Menu / Top
	0		0
	Text/ Media		Text / Goto
	Sound		Sound / Title
	Repeat		Shift + Green / APP /

Originale		Sostituto	

