



 



 







 



 









 

 

 

 





 
 
 

 
 
 















 

 

 

 

 



 

 

 

 



 

 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Green		Green / APP / Repeat
	DTV		Shift + TV/Radio / Program		Yellow		Yellow / YouTube / Repeat
	TV		TV/Radio /		Blue		Blue / Prime Video / Random
	AV		AV / Input / RDS		Vol+		Vol+
	1		1		i		Info / Angle
	2		2		CH+		CH+ / Page+
	3		3		Vol-		Vol-
	4		4		Mute		Mute / Dimmer
	5		5		CH-		CH- / Page-
	6		6		EPG		Guide / EPG / -/-
	7		7		Option		Setup / OPT /
	8		8		Up		Up
	9		9		Left		Left
	Text		Text / Goto		OK		OK
	0		0		Right		Right
	PRE-CH		Back / Return		Down		Down
	Red		Red / Netflix / Search		Menu		Menu / Home





Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 File List/[≡i]	 Smart / List
 Bookmark/[.,≡]	 Display / Media
 Repeat/[≡O]	 Shift + Green / APP / REPEAT
 A<>B/[≡?]	 Shift + Yellow / YouTube / REPEAT A-B
 PIC Size	 Zoom / Size
 PIC Mode	 Picture / Format
 SND Mode	 Sleep / Timer
 M/S	 D.Menu / Top

Originale	Sostituto

