











 

 

 

 

 

 

 

 











Originale	Sostituto
 Standby	 Power
 Auto / Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv / Radio	 TV/Radio /
 Recall	 Back / Return
 Vol+	 Vol+
 Title / Pr List	 Shift + Sound / Title
 Title / Pr List	 Smart / List

Originale	Sostituto
 Menu / EPG	 D.Menu / Top
 Menu / EPG	 Guide / EPG / -/-
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 Ch-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 LCD Menu / Exit	 Menu / Home
 Down	 Down
 DVD Setup / Exit	 Setup / OPT /
 DVD Setup / Exit	 Shift + Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title



