 



 



 





 





 



 







 







 





 

 

 

 









 



 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		OK		OK
	[≡]/Text		Text / Goto		Right		Right
	I-II		Audio / Lang I/II		Down		Down
	[<>]/[+]		Shift + Picture / Format		A/D		Shift + Audio / Lang I/II
	AV/[?]		AV / Input / RDS		EPG		Guide / EPG / -/-
	Red		Red / Netflix / Search		Vol+		Vol+
	Green		Green / APP / Repeat		Mute		Mute / Dimmer
	Yellow		Yellow / YouTube / Repeat		PR+		CH+ / Page+
	Blue		Blue / Prime Video / Random		Vol-		Vol-
	[...]		Subtitle / EQ		PR-		CH- / Page-
	[1 2] Split Window		Display / Media		1		1
	Cancel		Exit / Cancel / Clear		2		2
	Option		Setup / OPT /		3		3
	Tv Menu		Menu / Home		4		4
	Digital Menu		D.Menu / Top		5		5
	Up		Up		6		6
	Left		Left		7		7



