



| Originale | Sostituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  DTV/ATV |  D.Menu / Top |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |

| Originale | Sostituto |
|--|---|
|  Menu |  Menu / Home |
|  Source |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Display |  Display / Media |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  MTS |  Info / Angle |
|  Rec List |  Smart / List |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  FAV/List |  Fav / Marker / PC |
|  Rec |  Rec / Rec Mode |














| Originale | | Sostituto | | Originale | | Sostituto | |
|---|------------------------|---|-------------------------------|---|--------|---|-----------------------------|
|  | Freeze |  | Pause / Step / Freeze |  | Green |  | Green / APP / Repeat |
|  | Guide |  | Guide / EPG / -/- |  | Yellow |  | Yellow / YouTube / Repeat |
|  | << |  | << / Tune- |  | Cyan |  | Blue / Prime Video / Random |
|  | >> / Aspect |  | >> / Tune+ | | | | |
|  | >> / Aspect |  | Shift + Picture / Format | | | | |
|  | I<< / Cancel |  | I<< / Preset- | | | | |
|  | I<< / Cancel |  | Shift + Exit / Cancel / Clear | | | | |
|  | >>I / Sub.PG |  | >>I / Preset+ | | | | |
|  | Stop / Index |  | Stop / Hold | | | | |
|  | Play/Pause / Timeshift |  | Play / Slow | | | | |
|  | Tv/Radio |  | TV/Radio / | | | | |
|  | Subtitle |  | Subtitle / EQ | | | | |
|  | Reveal |  | Eject / Surround | | | | |
|  | Size |  | Zoom / Size | | | | |
|  | Hold |  | Shift + Stop / | | | | |
|  | Text |  | Text / Goto | | | | |
|  | Red |  | Red / Netflix / Search | | | | |





| Originale | Sostituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  DTV/ATV |  D.Menu / Top |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |

| Originale | Sostituto |
|--|---|
|  Menu |  Menu / Home |
|  Source |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Display |  Display / Media |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  MTS |  Info / Angle |
|  Rec List |  Smart / List |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  FAV/List |  Fav / Marker / PC |
|  Rec |  Rec / Rec Mode |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|------------------------|-----------|-------------------------------|-----------|--------|-----------|-----------------------------|
| | Freeze | | Pause / Step / Freeze | | Green | | Green / APP / Repeat |
| | Guide | | Guide / EPG / -/- | | Yellow | | Yellow / YouTube / Repeat |
| | << | | << / Tune- | | Cyan | | Blue / Prime Video / Random |
| | >> / Aspect | | >> / Tune+ | | | | |
| | >> / Aspect | | Shift + Picture / Format | | | | |
| | I<< / Cancel | | I<< / Preset- | | | | |
| | I<< / Cancel | | Shift + Exit / Cancel / Clear | | | | |
| | >>I / Sub.PG | | >>I / Preset+ | | | | |
| | Stop / Index | | Stop / Hold | | | | |
| | Play/Pause / Timeshift | | Play / Slow | | | | |
| | Tv/Radio | | TV/Radio / | | | | |
| | Subtitle | | Subtitle / EQ | | | | |
| | Reveal | | Eject / Surround | | | | |
| | Size | | Zoom / Size | | | | |
| | Hold | | Shift + Stop / | | | | |
| | Text | | Text / Goto | | | | |
| | Red | | Red / Netflix / Search | | | | |

