




























 






 




Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Picture Mode	 Picture / Format
 Sound Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV+	 Shift + Up
 0	 0
 FAV-	 Shift + Down

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Up	 Up
 FAV	 Fav / Marker / PC
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 EPG	 Guide / EPG / -/--
 Vol+	 Vol+
 Audio	 Audio / Lang I/II
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat



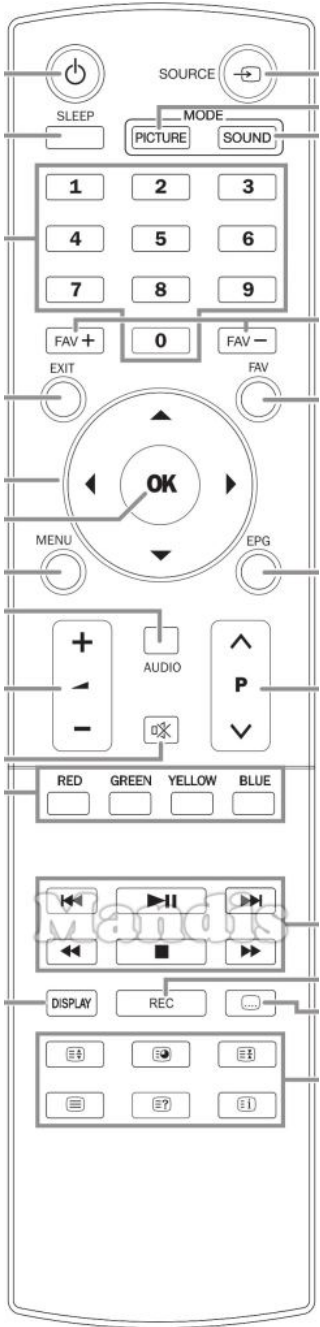

	Originale	Sostituto	
	Yellow	 Yellow / YouTube / Repeat	
	Blue	 Blue / Prime Video / Random	
	I<<	 I<< / Preset-	
	Pause	 Pause / Step / Freeze	
	Play	 Play / Slow	
	>>I	 >>I / Preset+	
	<<	 << / Tune-	
	Stop	 Stop / Hold	
	>>	 >> / Tune+	
	Display	 Display / Media	
	Rec	 Rec / Rec Mode	
	[...]	 Subtitle / EQ	
	[≡♦]	 Zoom / Size	
	[≡o]	 Eject / Surround	
	[≡+]	 Shift + Stop /	
	[≡]	 Text / Goto	
	[≡?]	 Info / Angle	

	Originale	Sostituto	
	[≡i]	 Smart / List	

