 




 

 
 



 
 




 

 
 







Originale	Sostituto	Originale	Sostituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+

Originale	Sostituto	Originale	Sostituto
	Vol-		Vol-
	CH List		Smart / List
	CH-		CH- / Page-
	Sports		TV/Radio /
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Extra		Picture / Format
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Settings	 Setup / OPT /
 AD/Subt.	 Subtitle / EQ
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 <</ <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/>>	 >> / Tune+

Originale	Sostituto

