 



 

 
 
 
 
 

 

 

 

 
 
 
 
 
 
 
 
 

 









Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	




Originale
Sostituto

	Green/B		Green
	Yellow/C		Yellow
	Blue/D		Blue
	E-Manual	 + 	Shift + D. Menu
	Extra		D. Menu
	Search		TV/R
	PIC.Size		Format
	Picture	 + 	Shift + Format
	AD/Subt		Subt
	<</l<<		<<
	Pause		Pause
	>>/>>l		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originale
Sostituto

