



 


 


 





 












Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Source	 AV
 Sound	 Shift + Dual
 Picture	 Format

Originale	Sostituto
 Audio 1/2	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Sleep	 Sleep
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Index	 Back





Originale		Sostituto		Originale		Sostituto	
	Text		Text				
	List		List				
	Hold		Smart				
	Subtitle		Subt				
	Info		Info				
	Cancel		Exit				
	Reveal		TV/R				
	Zoom		Eject				

