



Originale	Sostituto	Originale	Sostituto
	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

Originale	Sostituto	Originale	Sostituto
	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





Originale	Sostituto
EXIT Exit	CLEAR EXIT CANCEL Exit / Cancel / Clear
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
TEXT Text	GOTO TEXT Text / Goto
T.Opt	SHIFT OPT-TOOLS SETUP Shift + Setup / OPT / Tools
Subtitle	EQ SUBTITLE Subtitle / EQ
Stop	HOLD Stop / Hold
Play	SLOW Play / Slow
Pause	STEP-FREEZE Pause / Step / Freeze
<<<	TUNE- <<< / Tune-
>>>	TUNE+ >>> / Tune+
Simplink	MEDIA DISPLAY Display / Media
AD	LANG I/II AUDIO Audio / Lang I/II
Rec	REC MODE Rec / Rec Mode
My APPS	SHIFT APP REPEAT Shift + Green / APP / Repeat

Originale	Sostituto

