 














 

 

 

 






 

 

 

 
 















 

 

 


 










Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Screen	 Picture / Format
 Presets	 Setup / OPT /
 ↔	 TV/Radio /
 FAV	 Shift + FAV / Marker / PC
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 SWAP	 Fav / Marker / PC
 Photo/Music/Movi	 D.Menu / Top
 World	 Smart / List
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 C	 Exit / Cancel / Clear
 Disp.	 Display / Media
 Search Mode	 Shift + Red / Netflix /
 Return	 Back / Return





Originale		Sostituto		Originale		Sostituto	
	CH+		CH+ / Page+		Yellow/Root		Yellow / YouTube / Repeat
	Info		Info / Angle		Blue/Title		Blue / Prime Video / Random
	Vol+		Vol+				
	CH-		CH- / Page-				
	Mute		Mute / Dimmer				
	Vol-		Vol-				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	Play		Play / Slow				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Red/↑/Zoom		Red / Netflix / Search				
	Red/↑/Zoom		Zoom / Size				
	Green/↓/Repeat		Green / APP / Repeat				

