

 
 


 
 
 

 
 





 




 
 
 

 
 
 



 



 

 
 

 




 

 





 


 




 

 








Originale	Sostituto
	 Power
	 Info
	 Mute
	 Dual
	 Ok
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 +  Shift + Guide
	 Exit

Originale	Sostituto
	 Menu
	 Red
	 Green
	 Yellow
	 Blue
	 Up
	 Down
	 Right
	 Left
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Play
	 Pause
	 Stop
	 <<





Originale	Sostituto
 >>	 >>
 [TV]	 TV/R
 D-Menu	 Smart
 TV	 Media
 AV	 AV
 P<P	 Pre Ch
 PP	 D. Menu
 [≡]	 Text
 [≡o]	 Subt
 [≡+]	 Format
 [≡x]	 3D
 [≡◆]/Wide	 Shift + Format
 [≡?]	 Options
 [≡i]/Guide	 Guide
 [::]/Subtitle	 Back

Originale	Sostituto



 


 

 













 


Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 Guide
 Exit	 Exit
 Red/↑/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Shift + Yellow
 Blue/Angle	 Blue

Originale	Sostituto
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 D-Menu	 Smart
 <<	 <<
 >>	 >>
 <<	 <<
 >>	 >>
 Time	 Shift + AV
 Zoom	 Shift + Eject
 Program	 Sleep
 Search Mode	 AV
 Repeat	 Text
 A-B	 Shift + Play
 C	 Yellow
 Title	 Info
 Display	 Shift + Info





Originale	Sostituto
 Open/Close	 Eject
 Menu	 Menu
 Select	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto

