


 



 

 

 

 






 

 





 


























 


 










Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Pic.Mode	 Picture / Format
 S.Mode	 Sound / Title

Originale	Sostituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Rec List	 Shift + Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat



