 






 





 

 

 





 







Originale	Sostituto
 Input	 AV / Input / RDS
 Power	 Power
 [▼]	 Fav / Marker / PC
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 O)/I/II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AD	 Sound / Title
 0	 0

Originale	Sostituto
 ATV/DTV	 TV/Radio /
 Vol+	 Vol+
 [≡i]/[i+]	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Quick	 Smart / List
 Guide	 Guide / EPG / -/-
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return





	Originale	Sostituto	Originale	Sostituto
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	[≡?]	 Display / Media		
	[≡+]	 Stop / Hold		
	[≡◆]	 Zoom / Size		
	Timer/[≡x]	 Sleep / Timer		

