




 
 











Originale	Sostituto
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Standby	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /

Originale	Sostituto
 0	 0
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Vol+
 Variable Skip	 Vol-
 Guide	 Guide / EPG / -/--
 Top Menu	 D.Menu / Top
 Disc Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search





Originale		Sostituto		Originale		Sostituto	
	Green		Green / APP / Repeat		Rec		Rec / Rec Mode
	Yellow/Mode		Yellow / YouTube / Repeat		Subtitle		Subtitle / EQ
	Blue/Search		Blue / Prime Video / Random		1.3x/0.8x PLY		Shift + Play /
	Blue/Search		Shift + Red / Netflix /		O)/Audio		Audio / Lang I/II
	<<		<< / Tune-		Sat Link		Smart / List
	Play		Play / Slow				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				
	Pause		Pause / Step / Freeze				
	VCR		Shift + 4				
	HDD		Shift + 7				
	DVD		Shift + 2				
	Time Slip		TV/Radio /				
	Dubbing		Picture / Format				
	Rec Mode		Shift + Rec / Rec Mode				

