



Originale	Sostituto	Originale	Sostituto
	Source		AV / Input / RDS
	Power		Power
	TV		TV/ Radio /
	TV		Shift + 1
	Quick		D. Menu / Top
	[ □ ]		Display / Media
	List		Smart / List
	Vol +		Vol +
	AD		Audio / Lang I/II
	P+		CH+ / Page+
	Vol -		Vol -
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



