
 





Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 World/Internet	 Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Camera/Music/Ph	 Picture / Format
 Guide	 Guide / EPG / -/-
 */o	 Shift + Guide / EPG / -/-
 */o..	 Fav / Marker / PC





Originale		Sostituto		Originale		Sostituto	
	[≡]/Text		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Lang		Audio / Lang I/II				
	[≡]..		Shift + Text /				
	[-o-]		Setup / OPT /				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

